

OCAM

4X4
ACCESSORIES

INSTALLATION INSTRUCTIONS



SKU: BST2-Ranger-22

Vehicle Compatibility: Ford Ranger/Everest 07/2022+,

VW Amarok 2023+

Install Time: 30 minutes

PARTS LIST



RH lower mounting bracket

1



LH lower mounting bracket

1



Bonnet mounting bracket

2



Nut

1

Bolt

1



Gas strut

2


IMPORTANT INFORMATION

- Always wear safety glasses and hearing protection.
- Make sure work area is kept clean at all times.
- Check that all components, as listed, are present.
- Thoroughly read all instructions.
- This product or its fasteners must not be modified in any way.
- These instructions are accurate at the revision date and do not take into account any changes made by the vehicle manufacturer to vehicle design after the revision date, or other accessories that are or have been fitted to the vehicle.
- It is the responsibility of the installer to confirm correct operation/clearance of all components.
- All holes drilled must have all burrs and swarf removed then coated with a suitable rust preventative paint.
- Ensure that all hardware is fastened to torque specifications as detailed in the instructions.
- On completion of the job, these instructions are to be given to the customer.


PRODUCT CARE

- To maintain the appearance of the product, wash and dry regularly using a quality car wash.
- The product fixing should be periodically checked for correct torque.


Torque Settings		
BOLT SIZE mm	TORQUE Nm	TORQUE ft. lb
M5	7	5
M6	11.8	8.7
M8	28.8	21.3
M10	57.5	42.3
M12	99.8	73.7

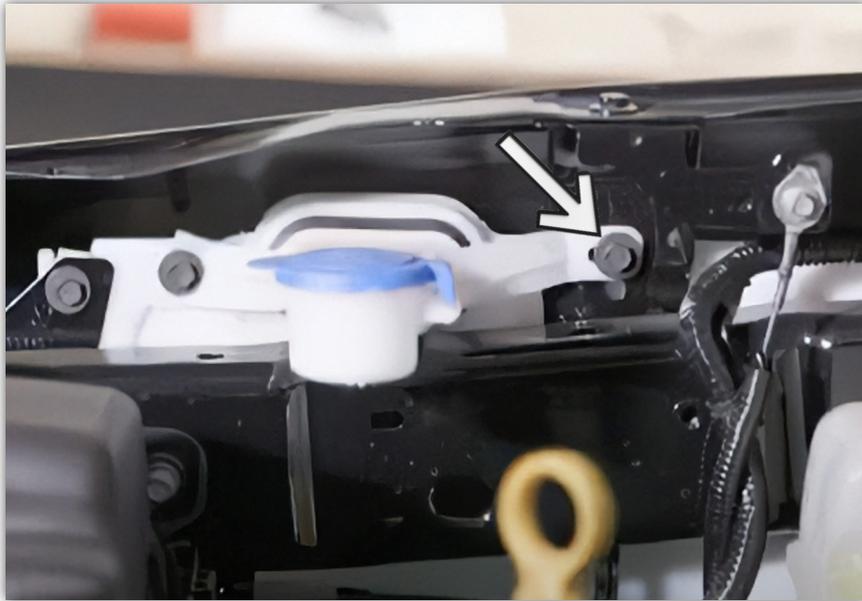


1. Remove bolt from washer bottle filler.

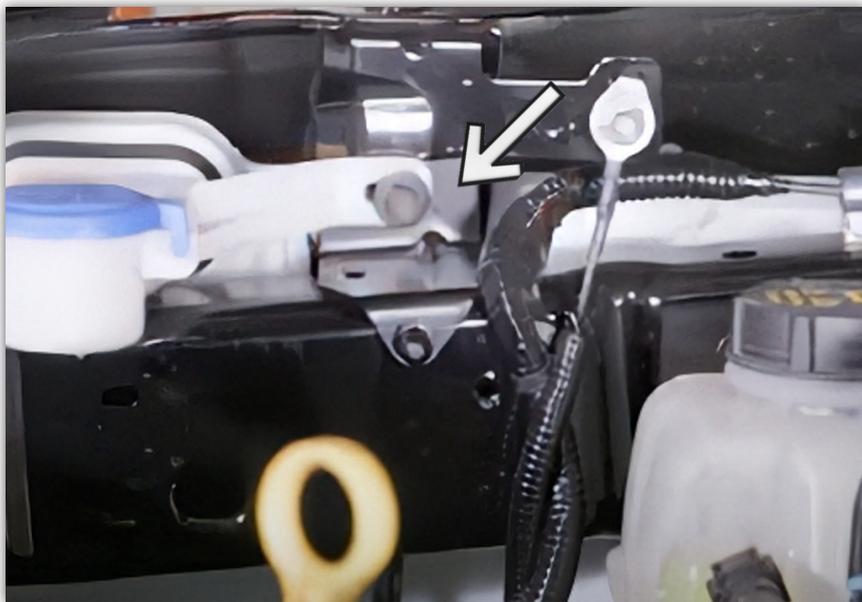


2. Install RH lower mounting bracket behind washer bottle filler, reuse factory bolt to secure bracket in place.

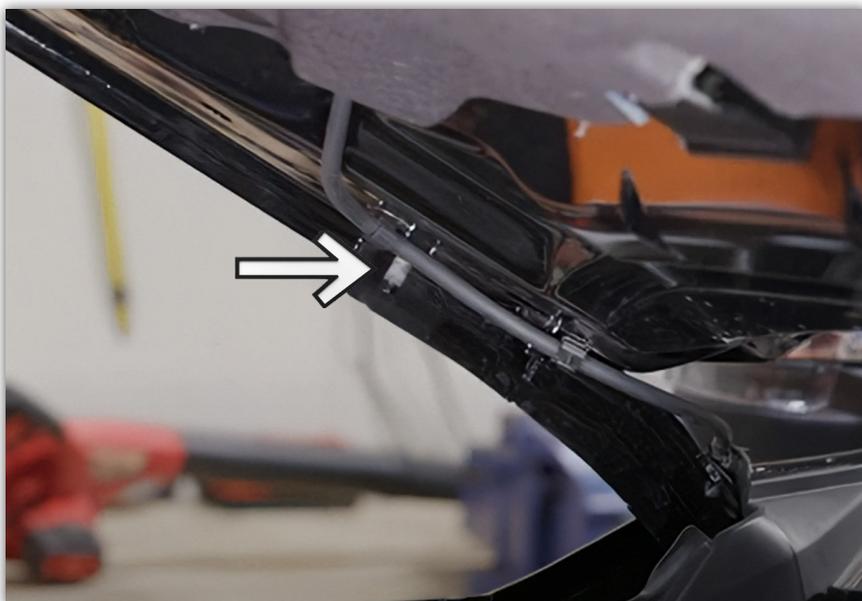


3. Remove bonnet hinge nut.

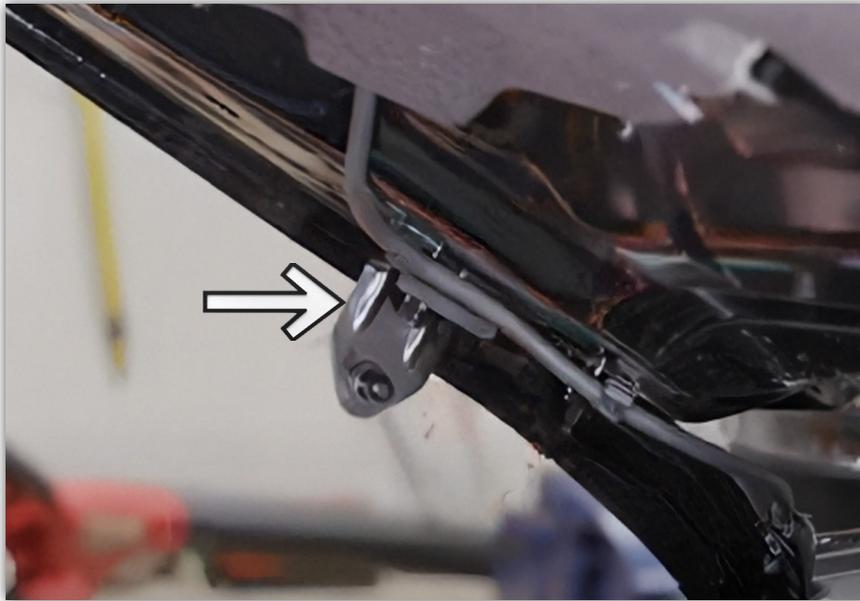


4. Install bonnet mounting bracket to bonnet hinge and secure with factory nut.

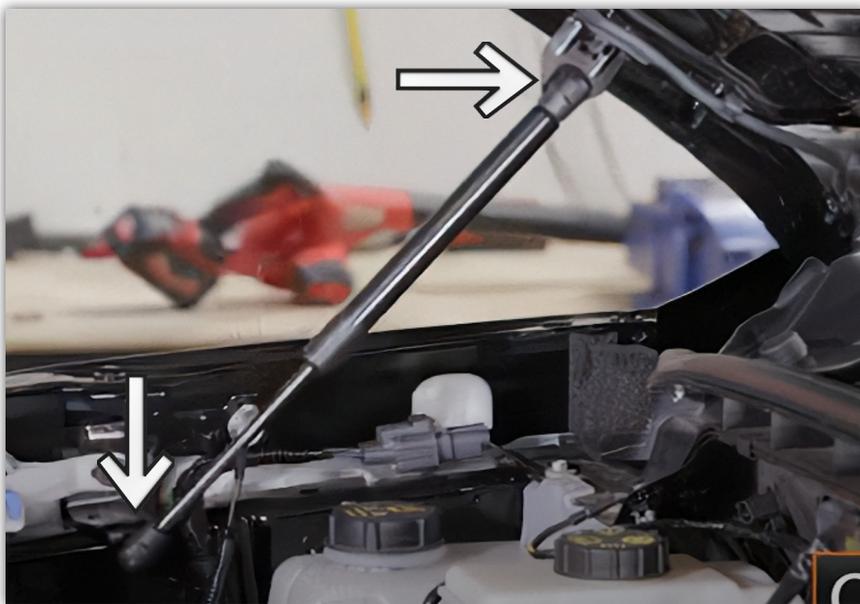

5. Push gas strut onto ball joints, ensure strut is installed in the correct orientation as shown.

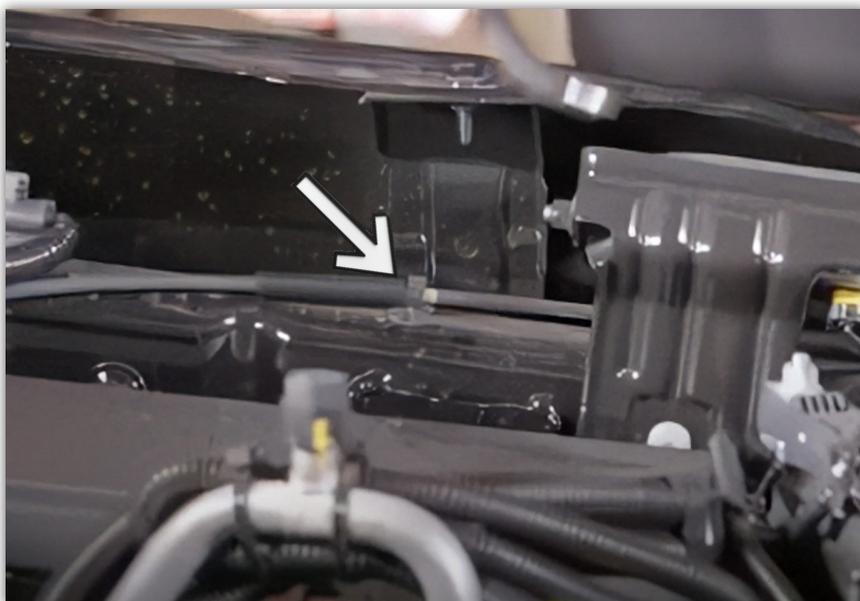

6. Remove bonnet release cable from vehicle body.

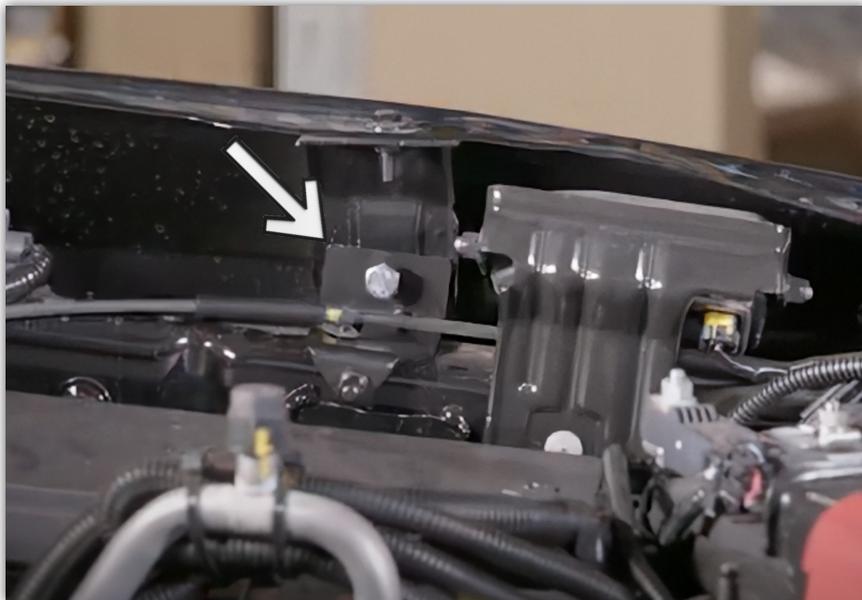

7. Install LH lower mounting bracket as shown and secure with nut and bolt supplied. Resecure bonnet release cable with factory clip.



8. Push gas strut onto ball joints, ensure strut is installed in the correct orientation as shown.

9. Job done!

Enjoy hassel free access next time you work on your rig.

Don't forget to put away the bonnet stay!