

OCCAM

4X4
ACCESSORIES

INSTALLATION INSTRUCTIONS



SKU: BST2-DMAX-12

Vehicle Compatibility: D-MAX / MU-X, 2012-20

Install Time: 0.5 hours

IMPORTANT INFORMATION

- Always wear safety glasses and hearing protection.
- Make sure work area is kept clean at all times.
- Check that all components, as listed, are present.
- Thoroughly read all instructions.
- This product or its fasteners must not be modified in any way.
- These instructions are accurate at the revision date and do not take into account any changes made by the vehicle manufacturer to vehicle design after the revision date, or other accessories that are or have been fitted to the vehicle.
- It is the responsibility of the installer to confirm correct operation/clearance of all components.
- All holes drilled must have all burrs and swarf removed then coated with a suitable rust preventative paint.
- Ensure that all hardware is fastened to torque specifications as detailed in the instructions.
- On completion of the job, these instructions are to be given to the customer.

PRODUCT CARE


- To maintain the appearance of the product, wash and dry regularly using a quality car wash.
- The product fixing should be periodically checked for correct torque.

Torque Settings		
BOLT SIZE mm	TORQUE Nm	TORQUE ft. lb
M5	7	5
M6	11.8	8.7
M8	28.8	21.3
M10	57.5	42.3
M12	99.8	73.7

Parts list		
Gas struts x2	LH Lower mounting bracket x1	LH Bonnet mounting bracket x1
Nut x2	RH Lower mounting bracket x1	RH Bonnet mounting bracket x1
Bolt x2		



1. Remove forwrd bonnet hinge bolts, install the bonnet mount brackets and secure with the factory bolts.

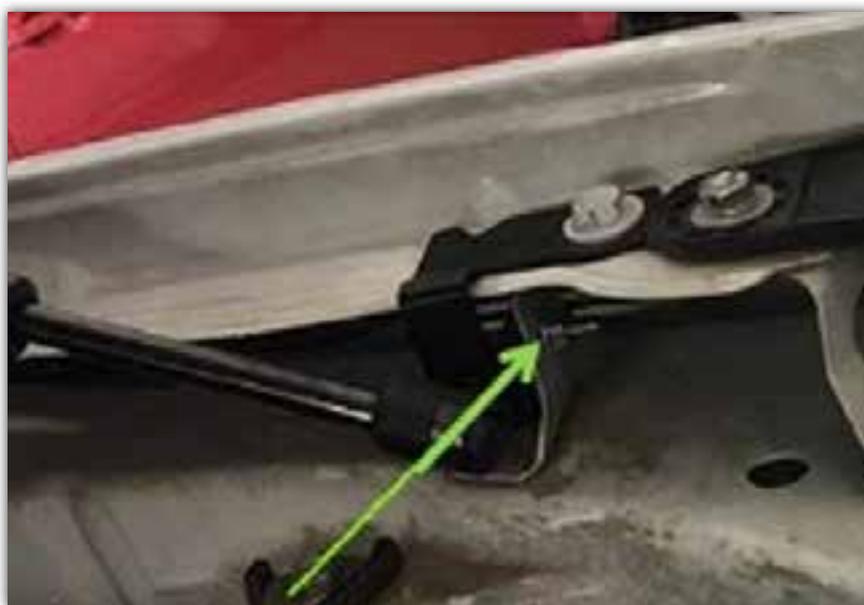

2. Remove panel bolt, install the lower mount backet and secure using the factory bolt.
3. Use the provided nut and bolt to secure bracket as shown.



4. Install gas strut to brackets by pushing the sockets on to ball joints.
5. Ensure the correct orientaion of the struts as shown.
6. Perform a final check ensuring all bolts are tightened.