

OCAM

4X4
ACCESSORIES

INSTALLATION INSTRUCTIONS



SKU: BST2-Ranger-22

Vehicle Compatibility: Ford Ranger/Everest 07/2022+,

VW Amarok 2023+

Install Time: 30 minutes

IMPORTANT INFORMATION

- Always wear safety glasses and hearing protection.
- Make sure work area is kept clean at all times.
- Check that all components, as listed, are present.
- Thoroughly read all instructions.
- This product or its fasteners must not be modified in any way.
- These instructions are accurate at the revision date and do not take into account any changes made by the vehicle manufacturer to vehicle design after the revision date, or other accessories that are or have been fitted to the vehicle.
- It is the responsibility of the installer to confirm correct operation/clearance of all components.
- All holes drilled must have all burrs and swarf removed then coated with a suitable rust preventative paint.
- Ensure that all hardware is fastened to torque specifications as detailed in the instructions.
- On completion of the job, these instructions are to be given to the customer.

PRODUCT CARE

- To maintain the appearance of the product, wash and dry regularly using a quality car wash.
- The product fixing should be periodically checked for correct torque.

Torque Settings		
BOLT SIZE mm	TORQUE Nm	TORQUE ft. lb
M5	7	5
M6	11.8	8.7
M8	28.8	21.3
M10	57.5	42.3
M12	99.8	73.7

PARTS LIST



RH lower mounting bracket	1
---------------------------	---



RH lower mounting bracket	1
---------------------------	---



RH upper mounting bracket	1
---------------------------	---



RH upper mounting bracket	1
---------------------------	---



Washer	2
--------	---




Bolt	2	Nut	2
------	---	-----	---




Gas strut	2
-----------	---



1. Use a spanner/socket to fully tighten each ball stu

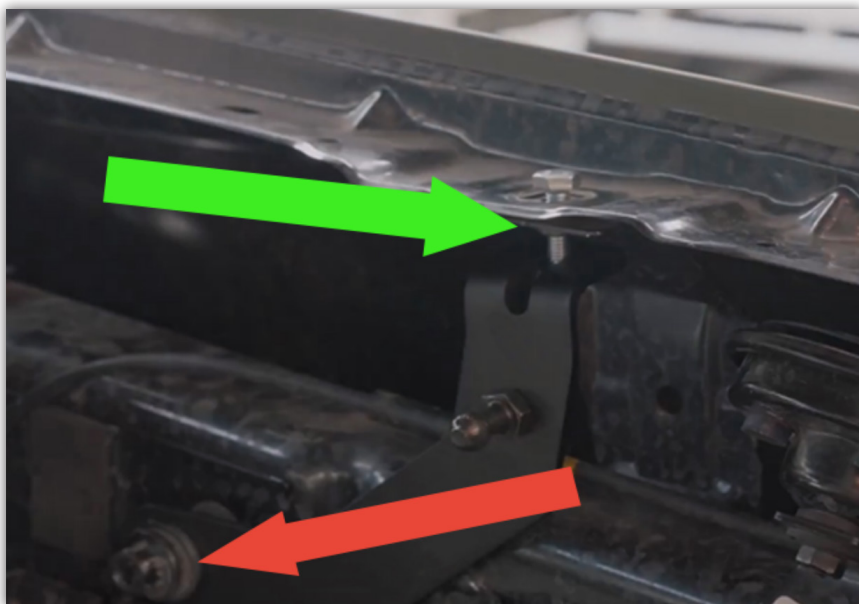

2. When installing the lower mounting brackets, first loosen the lower factory bolt(red arrow).
3. Slide the forked end of the lower mounting bracket under the factory bolt
4. Then install the bolt, washer and nut as shown (green arrow)

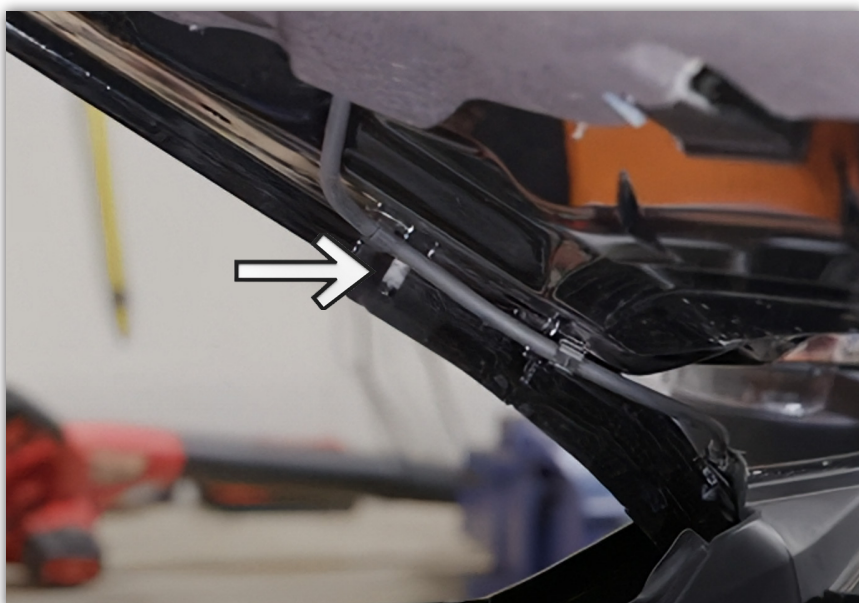

5. Remove factory bonnet bolts (remove one at a time to avoid bonnet shifting)



6. Secure the bracket using the factory bonnet bolts and tighten.



7. Install the socket of the strut onto the ball stud of the bonnet mounts
8. Ensure the thicker end of the strut is mounted to the bonnet



9. Install the socket of the strut onto the ball stud of the lower mounts
10. Ensure the thinner end of the strut is mounted to the bonnet
11. Perform a final tighten on all bolts
12. Congratulations! Your bonnet struts installation is now complete.