

OCAM

4X4
ACCESSORIES

INSTALLATION INSTRUCTIONS



SKU: BST2-HILUX-15

Vehicle Compatibility: Hilux N80, 2015-11/2025

Install Time: 30 minutes

IMPORTANT INFORMATION

- Always wear safety glasses and hearing protection.
- Make sure work area is kept clean at all times.
- Check that all components, as listed, are present.
- Thoroughly read all instructions.
- This product or its fasteners must not be modified in any way.
- These instructions are accurate at the revision date and do not take into account any changes made by the vehicle manufacturer to vehicle design after the revision date, or other accessories that are or have been fitted to the vehicle.
- It is the responsibility of the installer to confirm correct operation/clearance of all components.
- All holes drilled must have all burrs and swarf removed then coated with a suitable rust preventative paint.
- Ensure that all hardware is fastened to torque specifications as detailed in the instructions.
- On completion of the job, these instructions are to be given to the customer.

PRODUCT CARE

- To maintain the appearance of the product, wash and dry regularly using a quality car wash.
- The product fixing should be periodically checked for correct torque.

Torque Settings		
BOLT SIZE mm	TORQUE Nm	TORQUE ft. lb
M5	7	5
M6	11.8	8.7
M8	28.8	21.3
M10	57.5	42.3
M12	99.8	73.7

PARTS LIST



LH bonnet mouting bracket 1



RH bonnet mouting bracket 1



Washer 2




Nut 2



Gas Struts 2



1. Install the top bonnet bracket by using the factory nuts and washers
2. Install the the top of the bonnet strut to the bracket with the nut provided

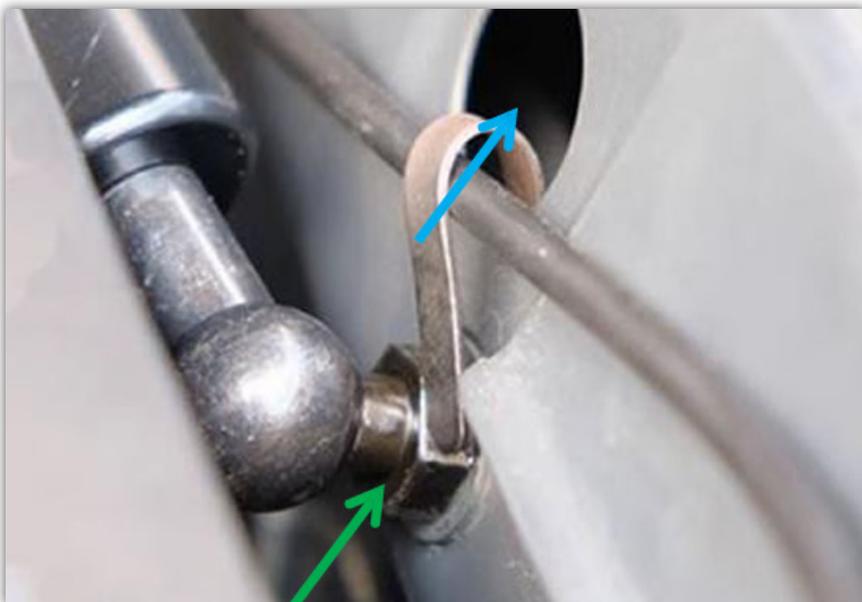

3. Install the bottom bracket
4. Install the lower end of the strut into the factory hole of the body by using the special custom nut provided



5. Complete for both sides
6. Ensure the correct orientaion of the struts as shown
7. Perform a final check ensuring all bolts are tightened