OCAM 4X4 ACCESSORIES

INSTALLATION INSTRUCTIONS



SKU: BST2-Hilux-26

Vehicle Compatibility: Hilux N90, 2026-On

Install Time: 45 minutes

IMPORTANT INFORMATION

- Always wear safety glasses and hearing protection.
- Make sure work area is kept clean at all times.
- Check that all componants, as listed, are present.
- Thoroughly read all instructions.
- This product or its fasteners must not be modified in any way.
- These instructions are accurate at the revision date and do not take into account any changes made by the vehicle manufacturer to vehicle design after the revision date, or other accessories that are or have been fited to the vehicle.
- It is the responsibility of the installer to confirm correct operation/clearance of all components.
- All holes drilled must have all burrs and swarf removed then coated with a suitable rust preventative paint.
- Ensure that all hardware is fastened to torque specifications as detailed in the instructions.
- On completion of the job, these instructions are to be given to the customer.

PRODUCT CARE

- To maintain the appearance of the product, wash and dry regularly using a quality car wash.
- The product fixing should be periodically checked for correct torque.

Torque Settings		
BOLT SIZE mm	TORQUE Nm	TORQUE ft. lb
M5	7	5
M6	11.8	8.7
M8	28.8	21.3
M10	57.5	42.3
M12	99.8	73.7

Tools Required	
Socket set	Spanner set

PARTS LIST



LH top bracket	1



RH top bracket	1



LH lower braket	1



RH lower bracket	1




Bonnet struts	2



Ball joint bolt	4
Hex head bolt	2
Flanged nut	4
Flat washer	4



1. Remove front bonnet mount bolt and install the LH and RH top brackets to the bonnet. Reuse factory bolt.
2. Install ball joint bolts to top brackets, install flat washer under ball joint bolt and secure with flanged nut.

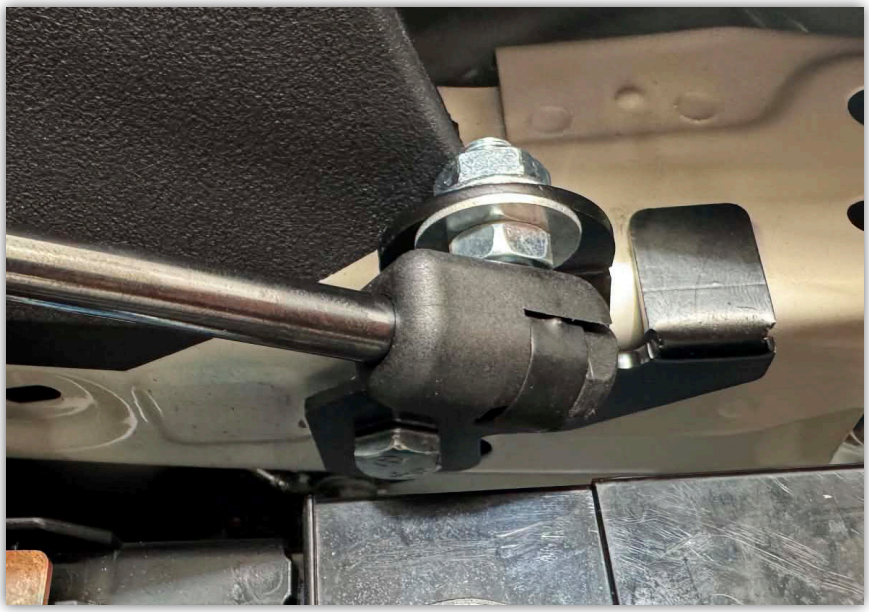

3. Install LH and RH lower brackets to vehicle body, use hex nuts supplied.
4. Install ball joint bolts to lower brackets, install flat washer under ball joint bolt and secure with flanged nut.



5. Install bonnet struts to top and lower brackets. Firmly press the sockets onto the ends of the ball joint bolts to clip into place. Ensure struts are installed with the body end to the bonnet as shown.