

Wiring Instructions to suit OCAM 4x4 TGLOCK-LDV-T60


1. Locate Black module on drivers side kick panel




2. Remove the top 22 Pin connector from module



3. Remove the top 22 Pin connector from module

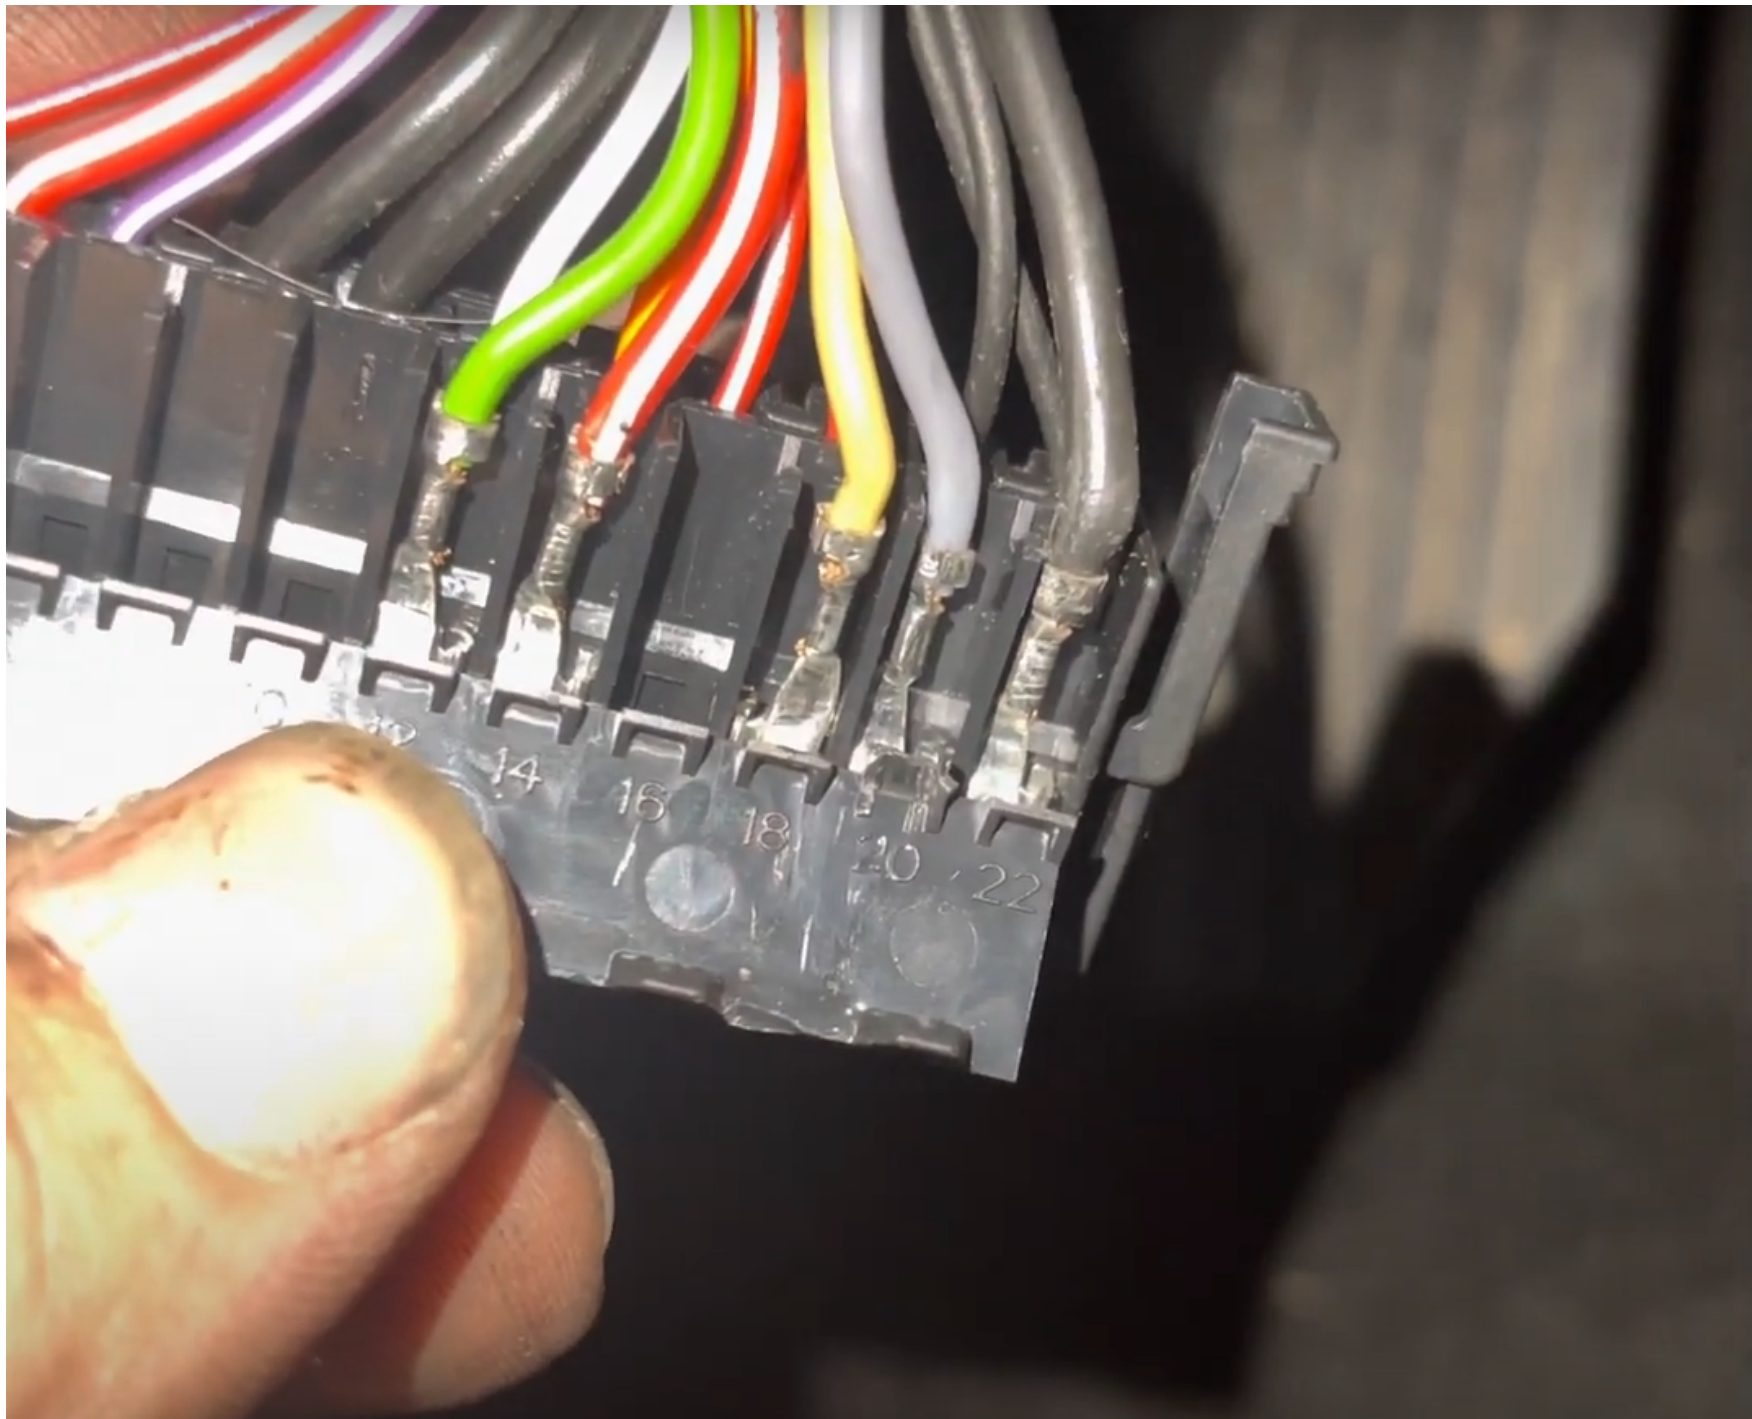

1. CONNECT GREEN WIRE FROM TAILGATE LOCK HARNESS TO PIN 20 GREY

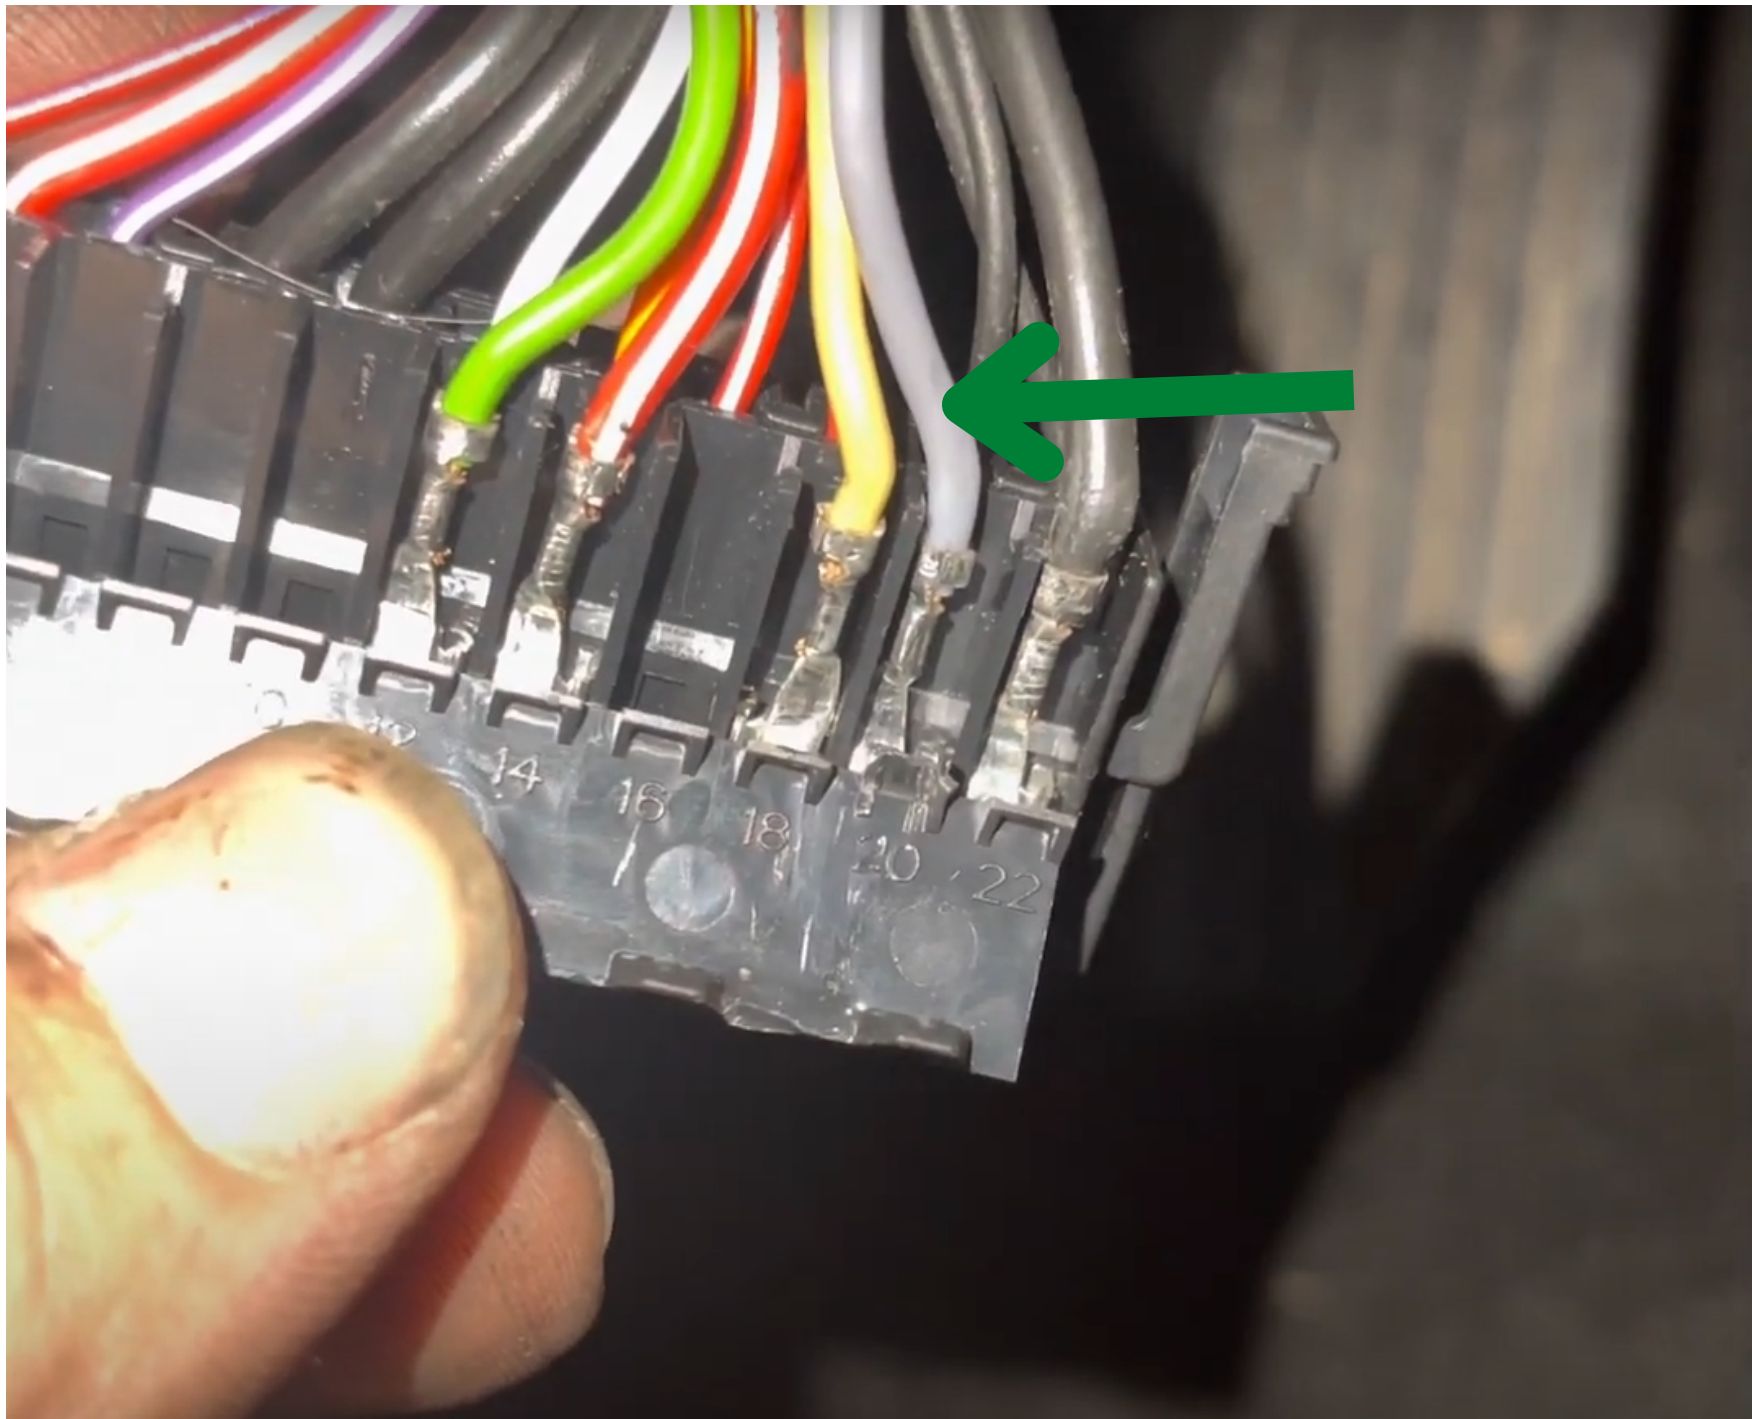

CONNECT BLUE WIRE FROM TAILGATE
LOCK HARNESS TO PIN 18 YELLOW (PRE
2023 MODELS)





2023+ MODEL
IS BROWN
WIRE > BLUE