


| | |
|---------------|----------------------------------|
| Description : | OCAM Heavy Duty Steel Side Steps |
| Model : | Volkswagon Amarok 2010-Current |
| Item NO. : | SS2-AMAROK |

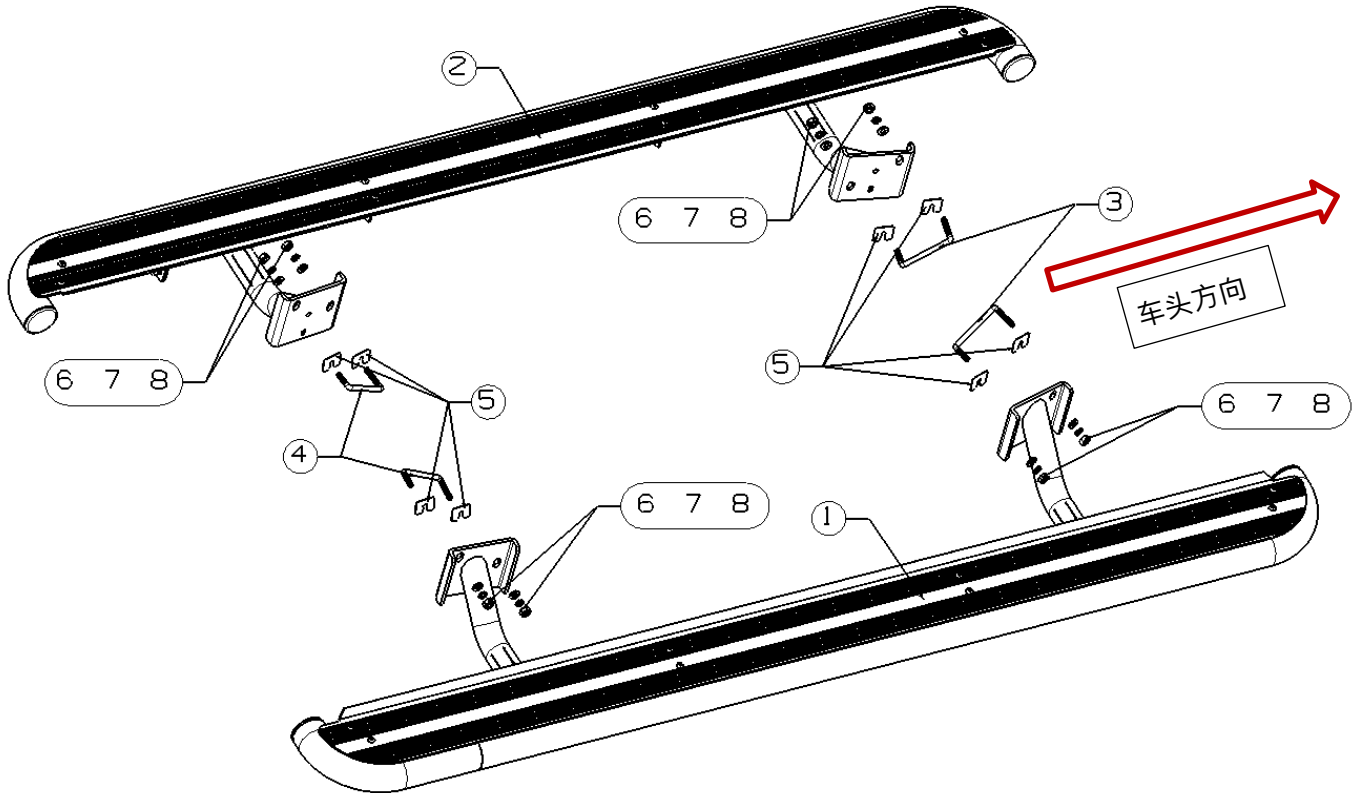

Before Installation

- Please read the instruction carefully. They will also help you to avoid scratches or other potential damage to your vehicle.
- All images are for reference only and may vary slightly with the actual product you received.

Care and Cleaning



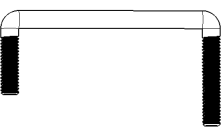

- Mild soap may be used also to clean the side steps.
- Please periodically check and retighten all the hardware and keep your investment clean for a fresh look.

Fitting Instructions


Standard locking torque

M10 - 80 Nm

PARTS LIST
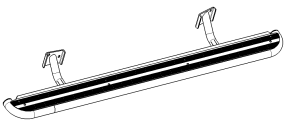
| Item | Item NO. | Description | Qty | Item | Item NO. | Description | Qty |
|---------------------|------------|--|-----|------|------------|--|-----|
| o1 | 200307916 |  Main step LHS | 1 | o2 | 200307931 |  Main step RHS | 1 |
| o3 | E200056360 |  U- M10x86mm | 2 | o4 | E200056358 |  U-bolt M10x97mm | 2 |
| o5 | 200193009 |  M10 plastic clip | 8 | | | | |
| Hardware kit | | | | | | | |
| Item | Item NO. | Description | | | | | Qty |
| o6 | 3000318 | Flat washer M10(10x20x2mm) | | | | | 8 |
| o7 | 3001491 | Hex bolt M10 | | | | | 8 |
| o8 | 3000160 | Spring washer M10 | | | | | 8 |

Fitting Instructions

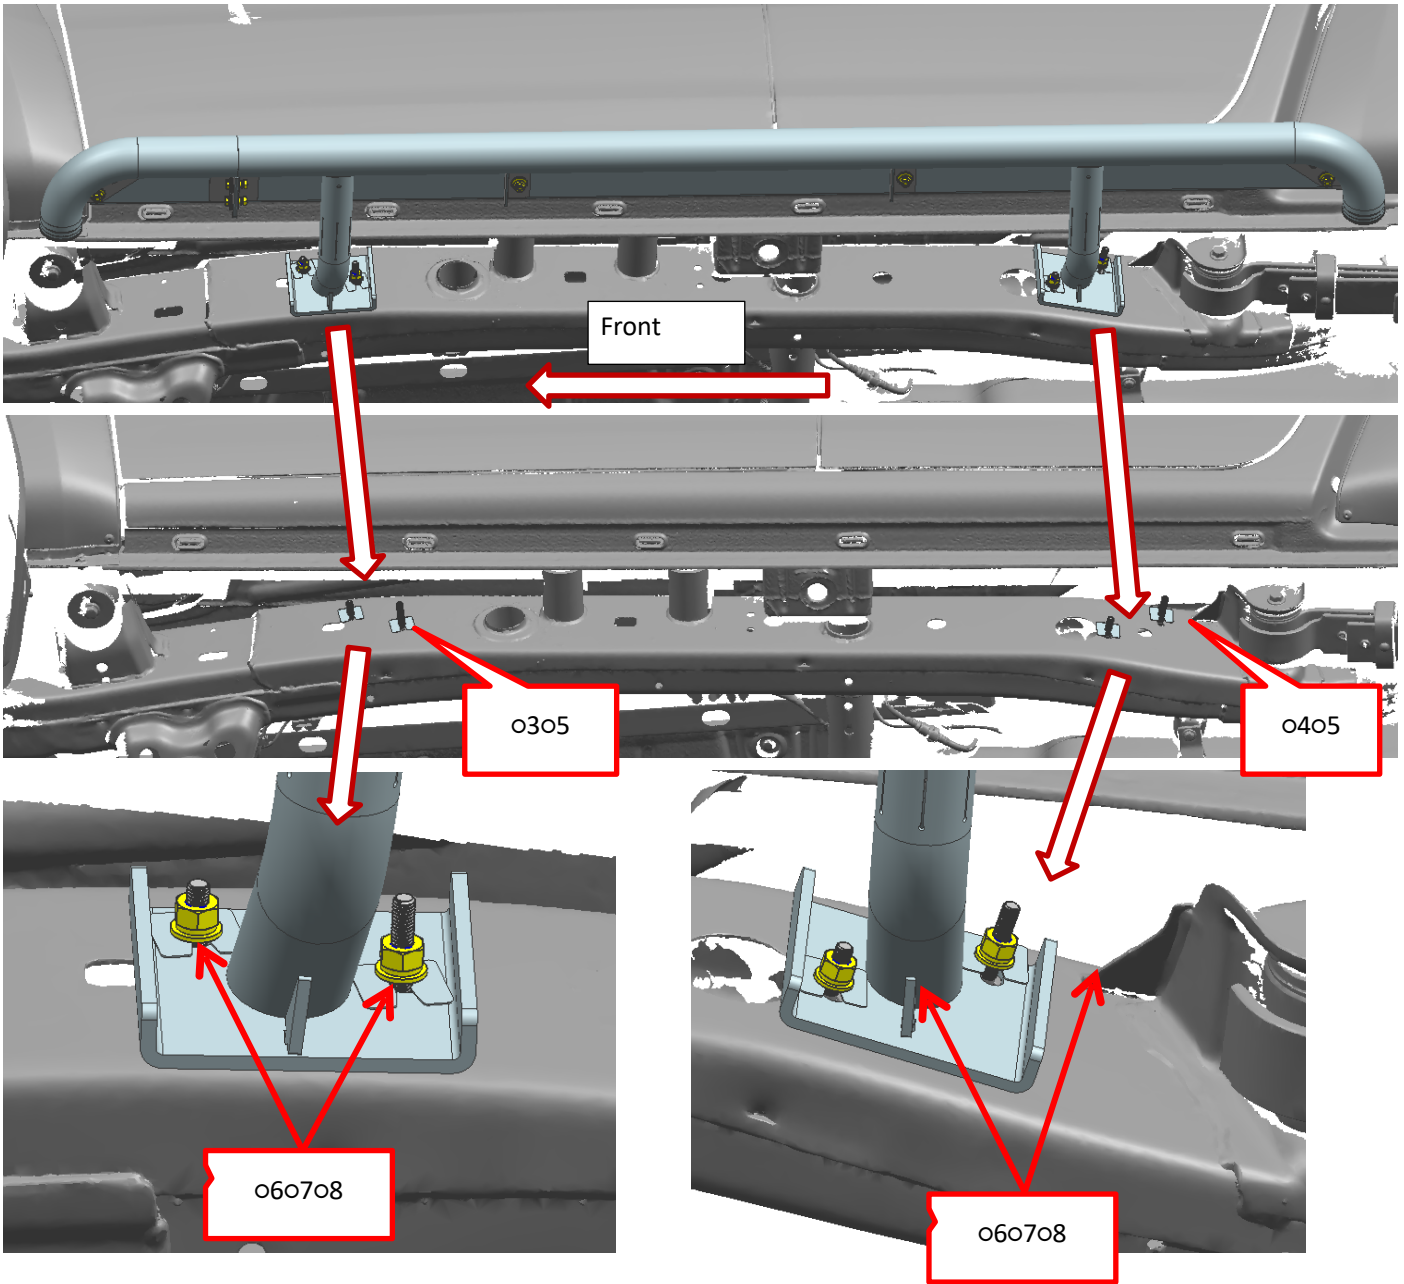

1. Place the o3 U- M10x86mm o4 U-bolt M10x97mm inside the chassis mounting holes and use the o5 M10 plastic clips to hold them in place.
2. Mount the side steps onto the chassis using o6 Flat washer M10(10x20x2mm) o7 Hex bolt M10 o8 Spring washer M10
3. Adjust the steps position correctly and then fasten all the bolts & nuts